

## MONROE 288C

Easy-to-use charge plate monitor for manual and automated testing with internal data storage



### AT A GLANCE

#### Electrometer Dynamic Range

±1200 V

#### Charge Plate Size

15 x 15 cm (6 x 6 in)

#### Data Storage

1500 Readings

#### Interface Type

USB

The Monroe 288C is the first charged plate monitor to incorporate a microprocessor and data storage, eliminating the need for a dedicated computer. All test parameters are programmable allowing tests to be optimized and not dictated by equipment limitations. Once programmed, the Monroe 288C will perform a series of tests automatically:  $\pm$  decays, balance, balance peaks, temperature, humidity, time/date are stored and may be reviewed via the display or downloaded to a PC. The included software allows the user to define and name ionizer locations, test setups, and sequences and then upload these to the CPM. All of these features result in a flexible, easy-to-use instrument that facilitates audits while minimizing errors.

### PRODUCT HIGHLIGHTS

- Fully configurable operating parameters
- Soft keys for highly intuitive programming
- CE Compliant
- Meets requirements of ANSI/ESD STM 3.1
- Manual and automated testing of decay and balance
- Internal storage for up to 1500 tests total (not for each location), 600 locations, and 4 test protocols
- Internal battery for portable operation (also line operated)
- Large, easy-to-read, high contrast LCD display
- Detachable 6 x 6 in plate (optional 1 X 1 in and 3 x 3 in plates available)
- USB interface
- Built-in temperature and humidity sensors
- Auto-ranging to 0.1V resolution below 100V
- Includes the 288C Graphing Software

## MONROE CHARGED PLATE MONITOR 288C

### TECHNICAL DATA

Display Specifications			
240 x 64 character/graphic			
Voltage	3½ digit display (Decay and Peak reading)		
	Accuracy	±0.1% of reading ±3 V	
	Resolution	1 volt	
Balance	0.1 volt for readings < 150 volts		
Time	4 digit display		
	Accuracy	0.1% of reading ±1 lsd	
	Resolution	0.1 second for readings < 1000 seconds	
1 second for reading > 999 seconds			

Electrometer Specifications	
Dynamic Range	±1200 volts
Follower Error	< 10 mV
Speed of Response	<10 msec for 1 kV to 0 volts (90 to 10%)
Bandwidth	-3db @ 1 KHz 20 V <sub>p-p</sub>
	-3db @ 10 Hz 2000 V <sub>p-p</sub>
Noise	< 12 mV rms

Monitor Output	
Divide by 200	
Accuracy Output	0.1% of reading ±1 mV Refer to Output
Impedance	1K ohm

Charge Plate Specifications	
Capacitance	20 pF ±2 pf
Zero Drift	< 100 mV/sec (no incident ion flow)
Self Discharge	< 200 mV/sec

Peak Detector Specifications (Balance Test)	
Bandwidth	> 10 Hz

Voltage Specifications			
	Start Voltages	Stop Voltages	Charge Voltages
Voltage	1000 V Standard	100 volts Standard	-
Range	±10 to ±1000 volts	0- ±995 volts	20 to 100 volts above the start voltage
Resolution	Settable to 1 volt	Settable to 1 volt	Settable to 1 volt increments
Accuracy	0.3% of setting ±2.5 volts	0.3% of setting ±2.5 volts	0.3% of setting ±2.5 volts

Sensor Specifications			
	Temperature	Humidity	
Range	0 to 50°C	10 to 80% RH @ 25°C	
Accuracy	±2°C typ	±5% typ	

**TECHNICAL DATA (CONTINUED)**

Stop Voltages	
100 volts Standard	
Range	0- ±995 volts
Resolution	Settable to 1 volt
Accuracy	0.3% of setting ±2.5 volts

Mechanical Specifications		
Dimensions (H x W x D)	280 x 229 x 152 mm (11 x 9 x 6 in)	
Weight	5.7 kg (12.5 lb)	
Data Storage	1500 Readings	
Battery Life	Typ > 6 hrs	
Charge Time	< 8 hrs to > 90% capacity	
Power	Voltage	90 to 250 VAC 50/60 Hz
	Wattage	25.5 W max


Environmental Specifications	
Temperature	5 to 35°C (41 to 95°F)
Humidity	to 80%, non-condensing
Altitude	Up to 2000 m

**TREK 288C OPERATION**

The Trek 288C performs manual or automatic decay and balance tests on critical ionization equipment and stores the results and averaged decay times for up to 600 workstations. Temperature and relative humidity are displayed real-time and recorded with the test data. All pertinent test information is presented on a large format LCD display. Custom protocols and personal workstation definitions can be uploaded and results downloaded for analysis via a bi-directional USB link. In decay mode, the plate is charged to a predetermined voltage from ±10 to ±1000. During test, the plate will discharge toward zero in the presence of ionization. The elapsed time of decay between the start voltage and a preset stop voltage, as low as zero volts, is displayed. In balance mode, isolated plate voltage, test duration and ± peak voltages are displayed. Self-tests include battery check, tests for functional errors and a built-in decay self confidence check.

**PLATE ASSEMBLY**

The 6 x 6 in (15 x 15 cm) plate assembly includes a detachable ground plane that is used for improved consistency in decay readings. Built in self-test resistor for function confidence check is also incorporated. (Optional 1 x 1 in or 3 x 3 in plate assemblies are available.) Small diameter (3 mm) low noise coaxial cable is used for inter-connection to main unit.

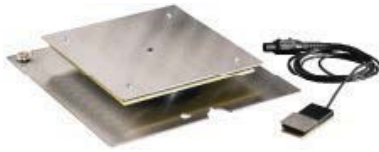

## ACCESSORIES

### Included Accessories

Charge plate extension cable (5 ft)
Ground cable
Power cord
Operator's Manual

### Optional Accessories

288/22N	Ionization Plate, 3 x 3 in
288/22G	Ionization Plate, 1 x 1 in
288/80	Carrying Case

**CONTACT:**  
**CALTRON PTE LTD**  
email: [caltron@caltron.sg](mailto:caltron@caltron.sg)  
[www.caltron.sg](http://www.caltron.sg)



For international contact information,  
visit [advancedenergy.com](http://advancedenergy.com).

[sales.support@aei.com](mailto:sales.support@aei.com)  
+1 970 221 0108

---

### PRECISION | POWER | PERFORMANCE

Specifications are subject to change without notice. Not responsible for errors or omissions. ©2023 Advanced Energy Industries, Inc. All rights reserved. Advanced Energy®, Monroe Electronics®, and AE® are U.S. trademarks of Advanced Energy Industries, Inc.

