

SxD

Portable Dual-link 3G/HD/SD-SDI Generation,
Analysis & Video/Audio Monitoring



SxD Overview

The SxD is a dual-link 3G/HD/SD-SDI instrument with two SDI inputs, two SDI outputs and no AES input or outputs. It offers support of multiple advanced video standards up to a combined maximum data rate of 3Gbits across the two SDI links, including 422/444, YUV/RGB, 10/12 bit and SMPTE 428-9 D-Cinema/SMPTE ST 2048-2:2011 formats.

With its impressive 4.3 inch 16:9 TFT monitor and easy to control menu buttons, the PHABRIX SxD has been designed specifically for the professional broadcast engineer.

The SxD offers advanced signal generation, analysis and monitoring capabilities. Configured with a full range of test patterns, both static and animated, the SxD is ideal for studio, OB, and lab environments. The SxD also now offers automatic link detection of single links of multilink 3G and HD based UHD formats.

An extensive array of video and audio tools include a multi-format waveform, vectorscope and video display, plus data view and VANC/ANC inspector. Over 350 formats are supported for compliance monitoring. Signal generation offers 32 test patterns, including pathological.

The SxD features support for 16-channel audio metering and bitstream generation and analysis of Dolby E, Dolby Digital and Dolby Digital Plus.

Advanced AV Delay Generation and Analysis tools offer an end-to-end solution for the measurement of Audio to Video differential delay through a broadcast system. The tool provides a realtime update of the differential delay between the video content and the selected audio channel pair to measure the propagation (latency) or pipeline delay.

With a built-in TCP/IP interface for remote control and comprehensive status logging with custom reports, the SxD offers unmatched ease of use for busy engineers who need to diagnose faults and assure compliance quickly.

SxD Key Features

- 3 in 1 Generator, Analyzer, Monitor
- 3G-SDI, HD-SDI, SD-SDI Dual Link
- Over 350 supported formats
- High quality 16:9 picture monitor
- Superior ease of use
- AV delay generation and analysis
- 32+ video test signals standard
- Moving zone plate standard
- Text and logo ident
- 16 channel embedded audio
- Audio genlock Bi/Tri/SDI cross lock
- 16 channel audio metering
- Bitstream generation and analysis of Dolby E, Dolby Digital and Dolby Digital Plus
- Waveform monitor
- Vectorscope
- Rugged reliability
- Ethernet based remote operation
- Battery and mains power


PHABRIX SxD 3-in-1 Generator/Analyzer/Monitor



Specifications

Monitor	
Display resolution	480 x 272 pixels auto scaling
Display type	16:9 24 bit color TFT
Display size	95 x 54mm
Processing	All digital
Video	
SDI	3G-SDI, HD-SDI, SD-SDI
Outputs	2 x 75 Ohm BNC
Inputs	2 x 75 Ohm BNC
Genlock	Bi/Tri/SDI with cross lock
Adjustable timing	0 to 1 frame
Text ident	Yes with font, color, point size
Logo ident	Yes
EDH	Yes (SD-SDI)
Video Test Signals	
Resolution	10/12 bits
Static Test Patterns	32+ including full frame
User defined	DPX, YUV, TGA, BMP
Zone plate	Yes
Video Inputs/Outputs	
SDI bit rates	3Gbps, 1.485Gbps, 270 Mbps
Frame rate selection	Yes
SMPTÉ formats supported	See www.phabrix.com
Audio	
Internal speaker	0.5 W
Audio DAC	24 bit stereo
Headphone socket	3.5mm with auto line out
Generator/Monitor	48 kHz 20-bit (SD-SDI) 24-bit (HD-SDI)
AES Output	1 x 75 ohm BNC
AES Input	1 x 75 ohm BNC
Audio Test Signal	
Fixed tones	17
Variable tones	1 Hz-24 kHz in 1Hz steps
Intermittent tone	Yes
White noise generation	Yes
Audio levels variable	0 to 100 dB in 1 dB steps
Audio phase invert	Yes
General	
Navigation panel	5 menu keys, 8 custom select
Integral battery supply	2 hours lithium polymer
Internal storage	8GB
Remote control	Web browser interface
Ethernet	Yes
Carry case	Included
AC power supply	Included (universal)
Security	Kensington lock fitting
Size	H: 92mm, W: 225mm, D: 42mm
Weight	0.9Kgs

Schematic of the SxD (Dual Link Version)

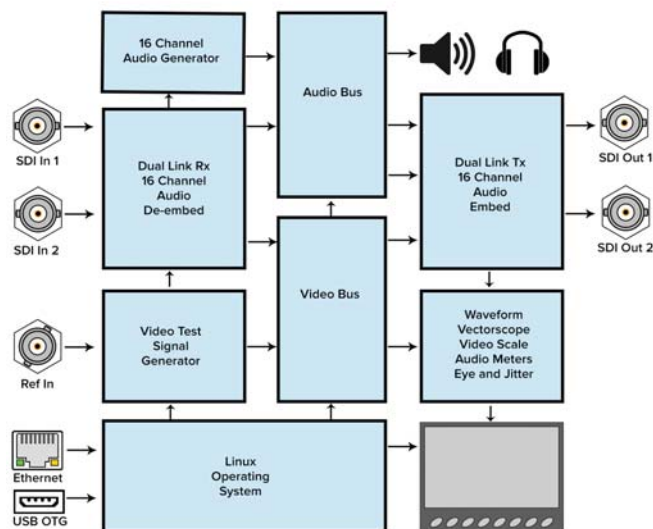

Soft carry case and AC power supply included as standard



Ordering Information

Handheld Device

PHSXDL - SxD Dual Link SD/HD/3G Handheld unit with PHABRIX soft carry case

SxD Software Options

- PHSXOS - Command Scripts and Reports (Repeat testing and create print report)
- PHSXOSD - SDI Data Display + VANC/ANC Inspector
- PHSXOR - Enhanced Remote Control integration
- PHSXOZ - Advanced zone plate generator (Programmable Y zone plate)
- PHSXO-DAG - Dolby E/D/D+ analysis + generation (streaming, metering, timing)
- PHSXO-AVD - AV Delay Analysis
- PHSXO-ENG - Engineering bundle with five options, namely PHSXOS, PHSXOSD, PHSXOR, PHSXOZ, PHSXO-DAG

Accessories

PHSXWM - Sx Wall mounting bracket

Extended Warranty

PHSX-3YEAR - 3 Year Warranty
PHSX-5YEAR - 5 Year Warranty

DISTRIBUTOR CONTACT:
CALTRON PTE LTD
email: caltron@caltron.sg
www.caltron.sg

Leader Electronics of Europe Limited
Omega House, Enterprise Way, Thatcham, Berkshire
RG19 4AE
United Kingdom
tel + 44 (0)1635 873030
email: sales@leadereurope.com